


Norms Solitary Bee House Drawings

The timber used is 1" thick, both 6" and 8" widths. However you can alter dimensions to use whatever timber you have to hand.

The fixings can be nails, as in this example or screws. 2" nails or 1.5" screws. The blocks are drilled as deep as you can without breaking through, normal jobber drills are fine.



From top to bottom the hole sizes are 2,4,6,8 and 10mm. The actual positions and locations don't need to be precise.

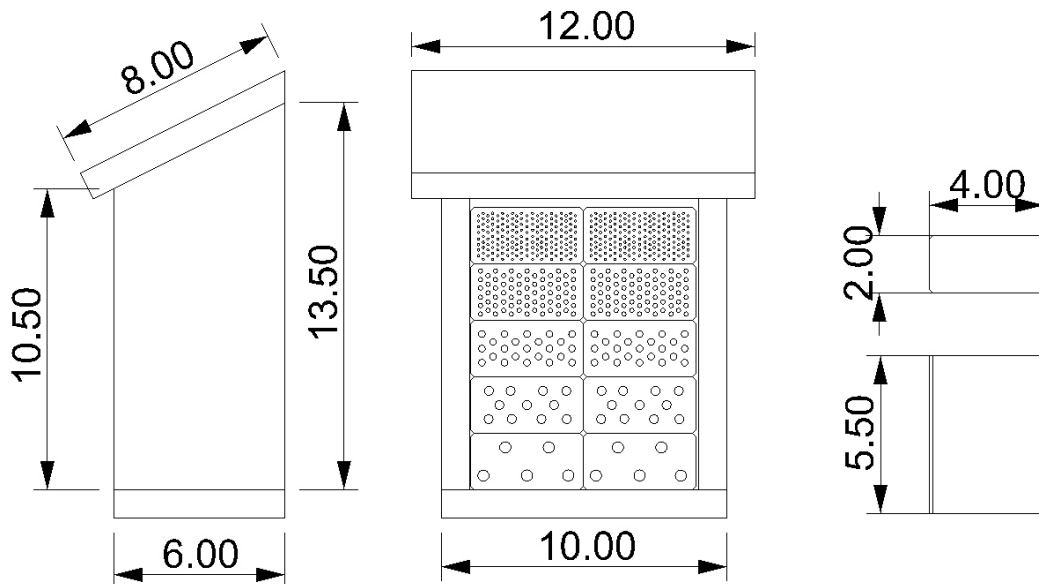

The blocks used in the house are 2"x4"x5.5" with the edges chamfered, the blocks need only be a loose fit.

It's probably a good idea once you have the parts cut to drill the top and bottom so when you nail or screw it together they drive straight into the wood. Watch for the fixings coming out of the rear of the sides if you set them too far back on the roof.

